



S'il vous plait utiliser le commerce pour envoyer votre commande.

Departement: Adapteur union mâle-mâle BSP - Mètr. - CEA			
Nr	Qté	Description	
NBM M-M R16-M38		UNION DOUBLE MALE-MALE BSPP 1" - M38	NBM M-M R08-M14
	UNION DOUBLE MALE - MALE BSPP 1/2" - M14	NBM M-M R08-M16	
UNION DOUBLE MALE- MALE BSPP 1/2" - M16	NBM M-M R08-M18		UNION DOUBLE MALE-MALE BSPP 1/2" - M18
NBM M-M R08-M20		UNION DOUBLE MALE-MALE BSPP 1/2" - M20	NBM M-M R08-M22
	UNION DOUBLE MALE - MALE BSPP 1/2" - M22	NBM M-M R08-M27	
UNION DOUBLE MALE- MALE BSPP 1/2" - M27	NBM M-M R04-M12		UNION DOUBLE MALE-MALE BSPP 1/4" - M12
NBM M-M R04-M14		UNION DOUBLE MALE-MALE BSPP 1/4" - M14	NBM M-M R04-M16
	UNION DOUBLE MALE - MALE BSPP 1/4" - M16	NBM M-M R04-M18	
UNION DOUBLE MALE- MALE BSPP 1/4" - M18	NBM M-M R04-M20		UNION DOUBLE MALE-MALE BSPP 1/4" - M20
NBM M-M R04-M22		UNION DOUBLE MALE-MALE BSPP 1/4" - M22	NBM M-M R02-M10
	UNION DOUBLE MALE - MALE BSPP 1/8" - M10	NBM M-M R02-M12	

UNION DOUBLE MALE- MALE BSPP 1/8" - M12	NBM M-M R02-M14		UNION DOUBLE MALE-MALE BSPP 1/8" - M14
NBM M-M R12-M22		UNION DOUBLE MALE-MALE BSPP 3/4" - M22	NBM M-M R12-M26
	UNION DOUBLE MALE- MALE BSPP 3/4" - M26	NBM M-M R12-M27	
UNION DOUBLE MALE- MALE BSPP 3/4" - M27	NBM M-M R12-M30		UNION DOUBLE MALE-MALE BSPP 3/4" - M30
NBM M-M R06-M12		UNION DOUBLE MALE-MALE BSPP 3/8" - M12	NBM M-M R06-M14
	UNION DOUBLE MALE- MALE BSPP 3/8" - M14	NBM M-M R06-M16	
UNION DOUBLE MALE- MALE BSPP 3/8" - M16	NBM M-M R06-M18		UNION DOUBLE MALE-MALE BSPP 3/8" - M18
NBM M-M R06-M20		UNION DOUBLE MALE-MALE BSPP 3/8" - M20	NBM M-M R06-M22